

Vandal Dome Network Camera Quick Setup Guide

NO:101-100-0511 Issue:1.1

Precautions

Fully understand this document before using this device, and strictly observe rules in this document when using this device. If you install this device in public places, provide the tip "You have entered the area of electronic surveillance" in an eye-catching place. Failure to correctly use electrical products may cause fire and severe injuries.

	It alerts you to moderate dangers which, if not avoided, may cause minor or moderate injuries.
	It alerts you to risks. Neglect of these risks may cause device damage, data loss, device performance deterioration, or unpredictable results.
	It provides additional information.

- Strictly observe installation requirements when installing the device. The manufacturer shall not be held responsible for device damage caused by users' non-conformance to these requirements.
- Strictly conform to local electrical safety standards and use power adapters that are marked with the LPS standard when installing and using this device. Otherwise, this device may be damaged.
- Use accessories delivered with this device. The voltage must meet input voltage requirements for this device.
- If this device is installed in places with unsteady voltage, ground this device to discharge high energy such as electrical surges in order to prevent the power supply from burning out.
- When this device is in use, ensure that no water or any liquid flows into the device. If water or liquid unexpectedly flows into the device, immediately power off the device and disconnect all cables (such as power cables and network cables) from this device.

· Do not focus strong light (such as lighted bulbs or sunlight) on

this device. Otherwise, the service life of the image sensor may be shortened.

 If this device is installed in places where thunder and lightning frequently occur, ground the device nearby to discharge high energy such as thunder strikes in order to prevent device damage.

A CAUTION

- Avoid heavy loads, intensive shakes, and soaking to prevent damages during transportation and storage. The warranty does not cover any device damage that is caused during secondary packaging and transportation after the original packaging is taken apart.
- Protect this device from fall-down and intensive strikes, keep the device away from magnetic field interference, and do not install the device in places with shaking surfaces or under shocks.
- Clean the device with a soft dry cloth. For stubborn dirt, dip the cloth into slight neutral cleanser, gently wipe the dirt with the cloth, and then dry the device.
- Do not jam the ventilation opening. Follow the installation instructions provided in this document when installing the device.
- Keep the device away from heat sources such as radiators, electric heaters, or other heat equipment.
- Keep the device away from moist, dusty, extremely hot or cold places, or places with strong electric radiation.
- If the device is installed outdoors, take insect- and moistureproof measures to avoid circuit board corrosion that can affect monitoring.
- Remove the power plug if the device is idle for a long time.

· All complete products sold by the manufacturer are delivered

The manufacturer will update this manual according to product

 This manual may contain misprints, technology information that is not accurate enough, or product function and operation description that is slightly inconsistent with the actual product, the final interpretation of company is as a standard.
 This manual is only for reference and does not ensure that the information is totally consistent with the actual product. For

function enhancement or changes and regularly update the

software and hardware described in this manual. Update information will be added to new versions of this manual without

strict inspection. The manufacturer shall not be held

responsible for counterfeit products.

consistency, see the actual product.

For more information, please refer to website

prior notice.

NOTE

along with nameplates, quick setup guide and accessories after

Open Package Examination

Open the package, check the appearance of product for no obvious damage, and confirm the item list for table 1-1 is consistent.

Table 1-1 Packing list

Component	Quantity	Remark
Vandal Dome Network Camera	1	
Quick Setup Guide	1	
L hexagonal wrench	1	
Installation location sticker	1	
Stainless self-tapping screw	3	
Plastic anchor	3	
Auxiliary thread-line tool	1	
Green terminal block 3.81-9P	1	
Green terminal block 3.81-4P	1	

Port name	C	Description	Remark
Reset button		the button for 5 seconds to original settings.	
Alarm/	Alarm	out A, alarm out A	Applied
Audio	out/in	out B, alarm out B	for alarm function
		G, ground	
		In, alarm in	
	Audio out/in	In, audio in	Applied
		Out, audio out	for audio function
		G, ground	
	Analog	CVBS, analog video output	
	video	G, ground	
Network access port	Connects to	o a standard Ethernet cable.	
12V power supply	The ports a	are 12V/ OUT/12V/IN.	
Over cable rubber stopper	Uses the au through the	uxiliary thread-line tool to cable	
Over function- cord rubber stopper	can use the	wo rubber stoppers, user tool (screw driver or L wrench)to pierce the stopper, cords in.	

Table 2-1 Interface of camera

2.2 Camera Dimensions

🛄 NOTE

Different devices may have different dimensions; Please refer to the actual product.

Figure 2-2 Dimensions of Dome(Unit:mm)

2.1 Device Ports

Device Structure


NOTE

2


Different devices may have different device ports; Please refer to the actual product.

  
Figure 2-1 Device ports



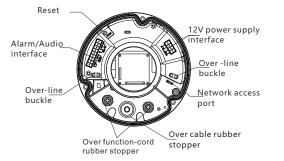








3 Device Installation

To avoid moisture influence, install the dome cover at least half an hour after the camera is installed and powered on.


The vandal dome camera can be installed in the ceiling, wall, wall bracket or ceiling bracket. This section describes how to install the camera in the ceiling.

Installation Steps:

 
- Step 1 Stick the Installation location sticker which is in accessory package on the ceiling or wall. Drill three holes based on the marks on the sticker. Drive the plastic anchors into the holes.
- Step 2 Use the wrench in the accessory package to unscrew the three screws on the dome cover. The camera is opened, as shown in figure 3-1. And use release the base panel



Step 3 Fetch three black self-tapping screws from the accessory package. Then fix the screws to fasten the base panel of camera on the ceiling as shown in figure 3-2. The position of hook should be put at the appropriate place, which should pass the bump as shown in figure 3-2.

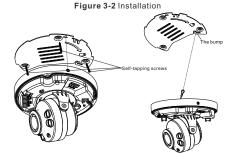


Step 4 Plug the network access port into interface by using the tool, as shown in figure 3-3; The power supply of the multi-head cable and other port to interface pass through the rubber stopper by using screw driver or L hexagonal wrench.

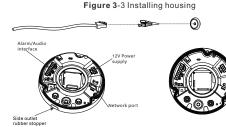

NOTE


- There are two outlet mode of cable, for the top outlet mode, user
- should drill the hole at first for threading cable. • The side outlet mode that the installation sticker's gap should
- align the outlet rubber stopper.
- Step 5 The set screw should be aligned the direction icon of base panel, then rotate the device clockwise to the extreme position, then tighten the set screw to lock block.

Step 6 Connect the camera to monitor, loosen the screws of support frame, as shown in figure 3-5. Adjust the three axes to focus image on monitoring scenarios. Tighten the screws to finish adjustment.

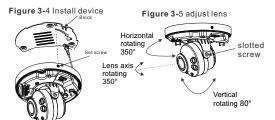

Step 7 Arrange the cable of camera to over-line buckle, then assemble the dome cover with hex wrench, as shown in figure 3-6.

Figure 3-6 Assembling cover

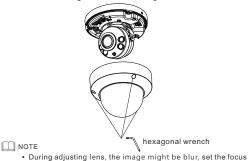

value in Sensor > Lens control page in web page.

4 Quick Configuration(e.g IE)

4.1 Login

 Step 1 Open the Internet Explorer, input the IP address of IP camera (the default value: 192.168.0.120) in the address box, and press Enter. The login page is displayed as shown in figure 4-1.

 Step 2 Input the user name and password.

NOTE

- The default user name and password both are admin. Modify the password when user logs into the system for the first time to ensure system security.
- It is advised to restart the device three minutes later after modifying password to ensure modified successfully.
- · User can change the system display language on the login page.

Figure 4-1 Login



Step3 Click Login, the main page is displayed.


4.2 Modify IP address

Choose Configuration > Device > Local Network, the Local Network page is displayed. Input the IP address in the IP Address box and click Apply as shown in

figure 4-2.

After the IP address is set successfully, please use the new IP address to login the Web interface.

Figure 4-2 Local Network

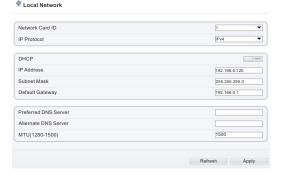

4.3 Browsing Video

To ensure the real-time video can be played properly, you must perform the following operation when you login the web for the first time: If you can view the live video directly, please ignore the steps of adding trusted sites.

Step 1 The Internet Explorer. Choose Tools > Internet options > Security > Trusted sites > Sites, in the display dialog box, click Add, as shown in figure 4-3.

Figure 4-3 Adding a trusted site

Internet Local intranet Trusted sites Restrict		
	the second se	
internet Loca intranet Trusted sites sites		
Trusted sites	Sites	
This zone contains websites that you trust not to damage your computer or	Trusted sites	A DESCRIPTION OF THE OWNER OF THE
your files.		
Security level for this zone	You can add and remove w this zone will use the zone's	ebsites from this zone. All websites in
Allowed levels for this zone: All		s security security.
- L - Low	and the second se	
	Add this website to the zone:	
Most content is downloaded and run with	hout prompts http://192.168.0.120	Add
Most content is downloaded and run wit All active content can run	hout prompts http://192.168.0.120	Add
 Most content is downloaded and run with 	hout prompts http://192.168.0.120	
Most content is downloaded and run wit All active content can run	http://192.168.0.120 y trust Websites:	Add
Heat content is downloaded and run with All active content can run Appropriate for sites that you absolutely Forable Protected Node (requires restarting Inter	hsut prompts http://192.168.0.120 websites: met Explorer)	
Heat content is downloaded and run with All active content can run Appropriate for sites that you absolutely Forable Protected Node (requires restarting Inter	http://192.168.0.120 y trust Websites:	
Host content is downloaded and run with All active content can run Appropriate for sites that you absolutely Frable Protected Node (requires restarting Inter	haut prompts http://192.168.0.120 y fust Webstes: met Explore) Default level	

Step 2 In the Internet Explorer, choose Tool > Internet Options > Security > Customer level, and set Download unsigned ActiveX control and initialize and script ActiveX controls not marked as safe for scripting under ActiveX controls and plug-ins to Enable, as shown in figure 4-4.

Figure 4-4 Configuring ActiveX control and plug-in



Step 3 Download and install the player control as prompted.

NOTE

If the repair tips are displayed when installing the control, please ignore the prompt, and continue the installation, close the browser during installing. Then login the page again.

To browse a real-time video, login the device and click Live Video. The Live Video page is displayed, as shown in figure 4-5.


Figure 4-5 Live Video



1 Personnel Count: User can query the data of personnel count, through year, month, day. The statistics can be downloaded. The data can be shown by line chart, histogram, list.

2 AI Live video: Click the icon to view the snapshots of human face or license plate (click "Face" or "Plate" to switch). The bottom page will show the captured images of vehicle and human face.

 Figure 4-6 Installation of personnel count



CAUTION If user requires higher accuracy of personnel count, we recommend the user to install camera and draw the line following as figure 4-6.

4.4 Intelligent Analysis

At "Configuration > Intelligent Analysis" interface, user can set the parameters of Perimeter, Single Virtual Fence, Double Virtual Fence, Multi Loiter, Converse and Personnel Count, as shown in figure 4-7 . Figure 4-7 Intelligent Analysis



4.5 Al Multi object

At "Configuration > Al Multi object" interface, user can enable face detection, full body detection, vehicle detection, set the other parameters of detection, as shown in figure 4-8.

Figure 4-8 Al Multi-object

Face Detection	ON		Body Pixel Min(30-300)	30	
Fullbody Detection	ON	a î	Vehicle Pixel Min(30-300)	30	1
/ehicle Detection	ON	i l	Image Matting Quality	Mid 🔻	
Display Trace Info	OFF	-	Snapshot Mode	Timing 🔻	
Show Detection Area) or	6	Upload Image Interval(1-10s)	5	
Confidence Coefficient	Mid	•	FTP Upload Image Matting	C) OFF	
ace Pixel Min(30-300)	30		FTP Upload Whole Image	011	
Body Pixel Min(30-300)	30	~	Algorithms Library Version		~

NOTE

For better capture performance, it is recommended to use $6 \mathrm{mm}$ focus length lens or above.