

UTF 4000 TX-MSA, UTF 4000 TX, UTF 4000 TX-2, UTF 4000 RX and UTF 4000 RX-2

Optical Video Transmitters/Receivers Multimode

USER MANUAL

WARNING

This is a Class A product. In a domestic environment this product may cause radio interference, in which case the user may be required to take adequate measures. Please read section 6 of this Manual

1. General description

This user manual is valid for the following models:

Model	Description	Housing
UTF 4000 TX-MSA	Transmitter mm	Stand-alone
UTF 4000 TX	Transmitter mm	Rack-mounted
UTF 4000 TX-2	Transmitter mm	Rack-mounted
UTF 4000 RX	Receiver mm	Rack-mounted
UTF 4000 RX-2	Receiver mm	Rack-mounted
UTF 40xx /SA		Stand-alone

Table 1. Models described in this user manual
mm = multimode fiber

A UTF (Up the Fiber™) transmitter (TX) converts a composite video signal into a high-quality, 9-bit digitised optical equivalent and transmits this over optical fiber. Additionally, the transmitter provides a voltage-free alarm contact (normally open) for door contacts and anti-tamper contacts, for example.

Complementary UTF receivers (RX) receive and convert the optical signal to video/contact closure. TX and RX models operate over one multimode optical fiber. TX-2 and RX-2 models are dual units, operating over two multimode optical fibers. All models use one transmission wavelength (1310 nm).

A wide range of operating temperatures makes the stand-alone transmitter suitable for use within outdoor camera housings and camera connection boxes (see Technical Specifications).

The transmitter can be powered by the camera power supply (12 Vdc or 24 Vac) or by a PSA/PSR 12 DC. For operation under extreme environmental conditions, the PSR 12 DC is recommended.


If 24 Vac is used, please read section 3 first.

The UTF transmitters (TX, TX-2) and receivers (RX, RX-2) are designed for use in a TKH Security MC power supply rack. The UTF 40xx/SA are the stand-alone versions of the rack-mounted models. The TX MSA model is a miniature stand-alone transmitter.

Depending on type, the units will handle one (TX, RX) or two (TX-2, RX-2) video/CC channels. The UTF transmitters and receivers are SNM compatible.

The general connection layout is given in figure 1.

Figure 1. UTF general connection

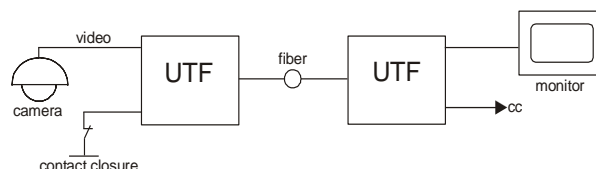

2. Indicators and connectors

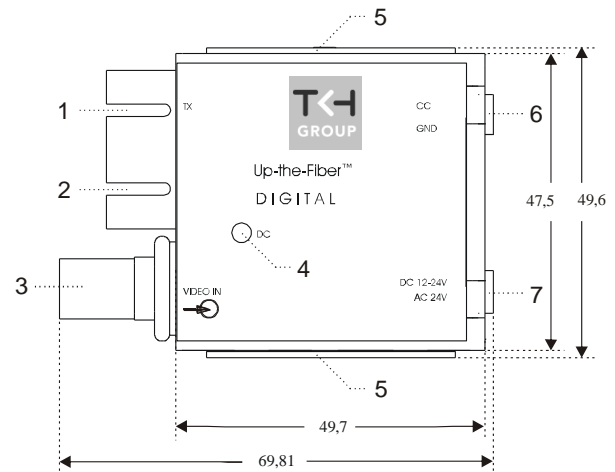


Figure 2a. Indications and connectors on the miniature UTF transmitter (stand-alone)

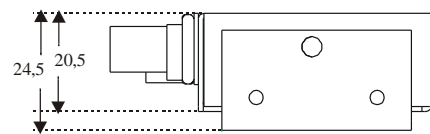


Figure 2b. Miniature UTF transmitter (stand-alone), side view

Transmitter

The miniature stand-alone UTF transmitter has the following parts, indicators, and connectors (figure 2a):

- 1: TX: optical fiber connection
- 2: Not used
- 3: BNC 75 Ω connector composite video input
- 4: DC: this indicator should show green when the system is powered up using a suitable power supply
- 5: Mounting bracket
- 6: 2-Pin connector for potential-free alarm contacts (CC/GND)
- 7: 2-Pin power supply connector

The rack-mounted UTF transmitter has the following indicators and connections (figure 3):

1. DC: this LED should show green when the system is powered up
2. NV: this LED can show the following colours:
 - Red: no video on in- or output;
 - Off: video signal present.
3. 4-Pin connector for potential-free alarm contacts (channel CC1/GND and channel CC2/GND).
4. BNC 75 Ω connector: composite video output
5. TX: connection for optical fiber
6. Not used

Note: Unlike the TX-2 model (shown in figure 3) the rack-mounted TX model comes with

- one TX connection
- a 2-pin connector for potential-free alarm contacts
- one BNC 75 Ω connector
- one NV LED

Receiver

The UTF receiver has the following indicators and connections (figure 4):

1. SYNC: this LED can show:
 - Green: operational link;
 - Red: local synchronisation error;
2. NV: this LED can show the following colours:
 - Red: no video on in- or output
 - Off: video signal present
3. 4-Pin connector for potential-free alarm contacts (channel CC1 and channel CC2)
4. BNC 75 Ω connector: composite video output
5. Not used
6. RX: connection for optical fiber

Note: Unlike the RX-2 model (shown in figure 4) the RX model comes with

- one RX connection
- a 2-pin output for potential-free alarm contacts
- one BNC 75 Ω connector
- one NV LED
- one SYNC LED

3. Configuration and installation

! Note on powering of a UTF TX-MSA with 24 Vac from the camera !

The miniature stand-alone transmitter can convert 24 Vac power through an internal full rectifier bridge; the "-" of its internal DC voltage is connected to the metal housing. If the camera uses the same Vac power supply in parallel, but with a single-sided rectifier circuit, the UTF power supply diodes may suffer, since there always will be a connection between the housings through the coax cable shielding. To prevent the occurrence of such problems, proper measures must be taken to separate the two loads of the 24 Vac supply; this might be preferable in any case, as a precaution.

If in doubt, please contact your distributor.

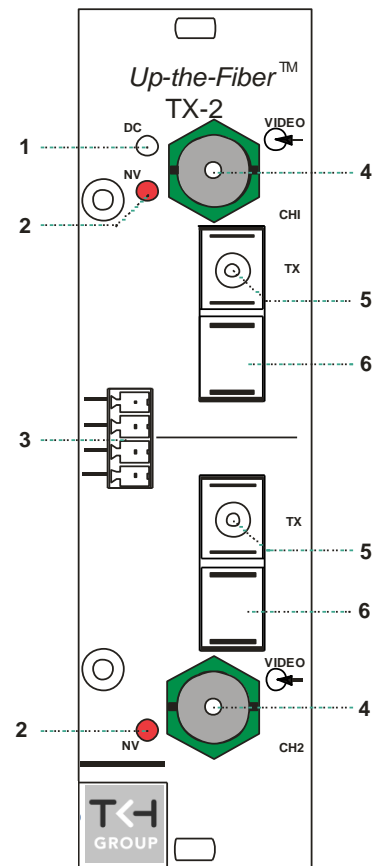


Figure 3. Indications and connections on the UTF TX-2 transmitter

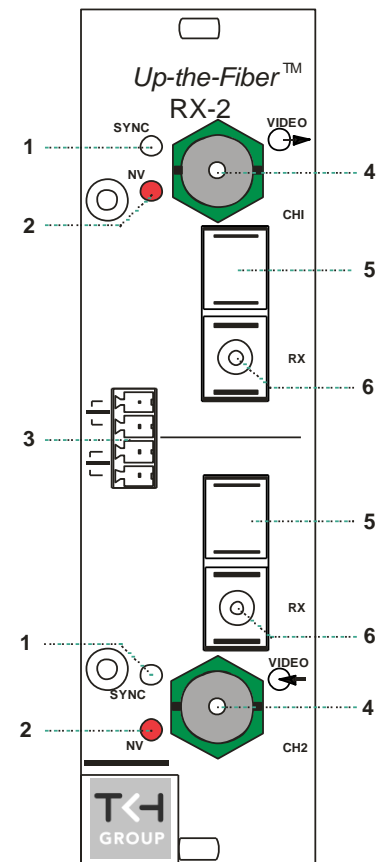


Figure 3. Indications and connections on the UTF RX-2 receiver

Mounting

Before mounting the miniature transmitter, the mounting bracket has to be installed in a suitable place. After securing the bracket, the transmitter can be clicked into it. Make sure the transmitter is positioned and fixed correctly.

A stand-alone receiver can be installed almost anywhere. When more than one receiver is needed, use TKH Security MC 10 and MC 11 cabinets.

Powering up a system

When powering up a system, the "DC" indicator on the transmitter (if powered by a suitable power supply) should show green and the "SYNC" indicator on the receiver should also light up green. When no video signal is present, the "NV" indicator(s) show(s) red.

4. Care and maintenance

The modules are designed to be maintenance free. To guarantee reliable operation of the unit, take the following precautions:

- prevent dust from collecting on or in the equipment;
- protect the equipment against moisture;
- maintain cooling space around the equipment.

5. Technical specifications

For technical specifications, refer to the data sheet of the relevant model.

6. Safety, EMC, ESD

General

The safety information contained in this section, and on other pages of this manual, must be observed whenever this unit is operated, serviced, or repaired. Failure to comply with any precaution, warning, or instruction noted in the manual is in violation of the standards of design, manufacture, and intended use of the unit.

Installation, adjustment, maintenance and repair of this equipment are to be performed by trained personnel aware of the hazards involved. For correct and safe use of the equipment and in order to keep the equipment in a safe condition, it is essential that both operating and servicing personnel follow standard safety procedures in addition to the safety precautions and warnings specified in this manual, and that this unit be installed in locations accessible to trained service personnel only.

Sigura assumes no liability for the customer's failure to comply with any of these safety requirements.

UL/IEC/EN 60950-1: General safety requirements

The equipment described in this manual has been designed and tested according to the UL/IEC/EN 60950-1 safety requirements.

If there is any doubt regarding the safety of the equipment, do not put it into operation. This might be the case when the equipment shows physical damage or is stressed beyond tolerable limits (e.g. during storage and transportation).

Before opening the equipment, disconnect it from all power sources. The equipment must be powered by a SELV^{*)} power supply.

When this unit is operated in extremely elevated temperature conditions, it is possible for internal and external metal surfaces to become extremely hot.

Optical safety

This optical equipment contains Class 1M lasers or LEDs and has been designed and tested to meet IEC 60825-1:1993+A1+A2 and IEC 60825-2:2004 safety class 1M requirements.

Optical equipment presents potential hazards to testing and servicing personnel owing to high levels of optical radiation. When using magnifying optical instruments, avoid looking directly into the output of an operating transmitter or into the end of a fiber connected to an operating transmitter, or there will be a risk of permanent eye damage. Precautions should be taken to prevent exposure to optical radiation when the unit is removed from its enclosure or when the fiber is disconnected from the unit. The optical radiation is invisible to the eye.

Use of controls or adjustments or procedures other than those specified herein may result in hazardous radiation exposure.

The installer is responsible for ensuring that the label depicted below (background: yellow; border and text: black) is present in the restricted locations where this equipment is installed.



The locations of all optical connections are listed in the Indications and Connectors section of this manual.

Optical outputs and wavelengths are listed in the Technical Specifications section of this manual.

EMC

Warning: Operation of this equipment in a residential environment could cause radio interference.

This device has been tested and found to meet the CE regulations relating to EMC and complies with the limits for a Class A device, pursuant to Part 15 of the FCC rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. These limits are designed to provide reasonable protection against interference to radio communications in any installation. The equipment generates, uses, and can radiate radio frequency energy; improper use or special circumstances may cause interference to other equipment or a performance decrease due to interference radiated by other equipment. In such cases, the user will have to take appropriate measures to reduce such interactions between this and other equipment.

Note that the warning above does not apply to TKH Security products which comply with the limits for a Class B device. For product-specific details, refer to the EU Declaration of Conformity.

Any interruption of the shielding inside or outside the equipment could make the equipment more prone to fail EMC requirements.

To ensure EMC compliance of the equipment, use shielded cables for all signal cables including Ethernet, such as CAT5E SF/UTP or better, as defined in ISO IEC 11801. For power cables, unshielded three wire cable (2p + PE) is acceptable. Ensure that all electrically connected components are carefully earthed and protected against surges (high voltage transients caused by switching or lightning).

ESD

Electrostatic discharge (ESD) can damage or destroy electronic components. Proper precautions should be taken against ESD when opening the equipment.

^{*)} SELV: conforming to IEC 60950-1, <60 Vdc output, output voltage galvanically isolated from mains. All power supplies or power supply cabinets available from Sigura comply with these SELV requirements.

7. Product disposal



Recycling

The unit contains valuable materials which qualify for recycling. In the interest of protecting the natural environment, properly recycling the unit at the end of its service life is imperative.

8. EU Declaration of Conformity

The EU Declaration of Conformity for this product is available at <http://www.tkhsecurity.com/support-files>.